30106268GB.fm Page 1 Monday, March 30, 2009 3:25 PM

GB

PROGRAMME CHART

- **A. "On/Off" button ⏻**
- **B. Programme selection buttons**
- **C. Option buttons**
- **D. "Start (Pause)" button**
- **E. "Special programmes" button**
- **F. "Temperature" button**
- **G. "Start delay" button**
- **H. "Variable spin" button (incl. "Rinse hold")**
- **I. "Reset/Drain" button**
- **J. "Favourites" button**

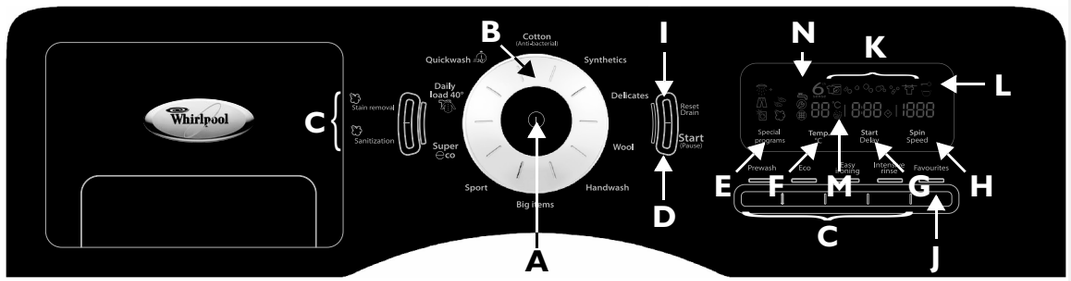

- **K. Programme sequence indication**
  - **Add garment** — **Programme in process** — **Programme finished**
- **L. "Child lock" indication**
- **M. "Detergent overdosage" indication**
- **N. Red failure indication**

The buttons of the control panel are touch buttons which are activated or deactivated by a simple touch with the fingertip (except the "On/Off" button - it must be pressed down). When operating a button, there is a quiet click; touching a button which is not selectable is answered by a double beep.

	Programme	Temperature °C	Care Labels	Max Load kg	Type of wash/Notes *- Respect the manufacturer's recommendations on the care label*	Detergents and additives: Pre-wash (I)	Detergents and additives: Main wash (II)	Detergents and additives: Softener	Special options: Stain removal 2)	Special options: Sanitization 2)	Special options: Pre-wash	Special options: Eco	Special options: Easy ironing	Special options: Intensive rinse	Start Delay	Spin: Spin Speed	Spin: Max Spin Speed rpm
	Cotton (Anti-bacterial)	*20 - 95 °C*	95 60 40 30	9.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. At a temperature of 80°C or more, this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001.	❊	Yes	❊	❊	❊	❊	❊	❊	❊	❊	❊	max.
	Synthetics	*20 - 60 °C*	60 50 40 30	3.5	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	❊	Yes	❊	❊	❊	❊	❊	❊	❊	❊	❊	max.
	Delicates	*20 - 40 °C*	40 30	2.5	Curtains and delicate clothing, dresses skirts, shirts and blouses.	❊	Yes	❊	—	—	❊	—	—	—	❊	❊	1000 1)
	Wool	*20 - 40 °C*	Woolmark 40	2.0	Only woollens, labelled with the Woolmark and identified as machine washable. This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool.	—	Yes	❊	—	—	—	—	—	—	❊	❊	1000 1)
	Handwash	*20 - 40 °C*	Woolmark	2.0	Textiles made of silk, linen, wool and viscose marked as "handwashable". This programme (40°C) is tested and approved by The Woolmark Company for handwashable wool.	—	Yes	❊	—	—	—	—	—	—	❊	❊	400 1)
	Big Items	*20 - 60 °C*	60 30	3.0	Blankets made of synthetic fibres; bed covers filled with feathers, polyester or other artificial fibers; sleeping bags, bathmats and similar items.	❊	Yes	❊	—	—	❊	—	—	❊	❊	❊	1000 1)
	Sport	*20 - 30 °C*	30 30	3.5	Normally soiled and sweaty sportswear made of cotton jersey or microfibers. *This programme includes a prewash cycle – you can add detergent also to the prewash chamber. Do not add any softener.*	❊	Yes	—	—	—	—	—	❊	❊	❊	❊	max.
	Super Eco	*20 - 60 °C*	95 60	9.0	Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. *Offers highest economy in energy consumption by prolonged washing duration. Ideal to be run overnight to additionally profit from the more favourable energy rates. To avoid noise of spinning at night, set spin speed to "0" and start spin programme in the morning, or define programme start with "Start delay" accordingly.*	—	Yes	❊	—	—	—	—	—	❊	❊	❊	max.
	Daily load 40°	*20 - 60 °C*	60 40 60 40	6.0	Slightly to normally soiled textiles made of cotton and/or synthetics.	—	Yes	❊	—	—	—	—	❊	❊	❊	❊	max.
	Quickwash 30'	*20 - 30 °C*	30	6.0	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	—	Yes	❊	—	—	—	—	—	—	❊	❊	max.
SPECIAL PROGRAMMES	Rinse & Spin	—	—	9.0	*Same as the last rinse and the final spin in the "Cotton" programme.*	—	—	❊	—	—	—	—	—	❊	❊	❊	max.
	Spin	—	—	9.0	*In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.*	—	—	—	—	—	—	—	—	—	❊	❊	max.
	Jeans	*20 - 60 °C*	60 40	7.0	Normally soiled cotton jeanswear and garments made of robust jeanslike material such as trousers and jackets.	❊	Yes	❊	❊	❊	❊	❊	—	—	❊	❊	max.
	Lingerie	*20 - 30 °C*	30	2.0	This programme is particularly suitable to treat delicate lingerie (use of a laundry net strongly recommended).	—	Yes	❊	—	—	—	—	—	—	❊	❊	400 1)
	Steam Auto Clean	—	—	—	Self-cleaning programme. Cleans the interior of your washing machine and thus helps to avoid smells or deposits. Run this programme regularly if you never or seldom wash your laundry at temperatures over 60°C or if your washing machine has not been in use for a long time. ***IMPORTANT: Do not load any laundry!*** *During this programme "St" appears on the display.*	—	—	—	—	—	—	—	—	—	❊	—	—
	Steam Refresh	—		1.0	Clean and dry laundry items made of cotton and/or synthetics which were already used. *Refreshes, reduces smells, moderates creasing and makes the items ready to wear or use within 20 minutes. After programme end, immediately put the laundry on hangers for 10 minutes before using. During this programme "St" appears on the display.*	—	—	—	—	—	—	—	—	—	❊	—	—

❊: optional / Yes : dosing required
1) For improved garment care, spin speed is restricted in these programmes.
2) Only selectable within the temperature range of 40 to 60°C.

The wool and handwash cycles of this machine have been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0702

Whirlpool is a registered trademark of Whirlpool USA

5019 301 06268

30106268GB.fm Page 2 Monday, March 30, 2009 3:25 PM

CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
Cotton (Anti-bacterial)	95	9.0	87**	2.60	2:10
Cotton	60	9.0	82	1.71	2:10
Cotton with "Eco"***	60	9.0	69	1.53	2:20
Cotton	40	9.0	82	0.80	2:05
Synthetics	60	3.5	46**	0.85	1:35
Synthetics	40	3.5	42	0.50	1:20
Delicates	30	2.5	60	0.40	0:45
Wool	40	2.0	60	0.60	0:45
Handwash	40	2.0	45	0.60	0:40
Big Items	40	3.0	74	0.75	1:30
Sport	30	3.5	54	0.55	1:34
Super Eco	60	9.0	80	1.08	4:00
Daily load 40°	40	6.0	73	0.60	1:00
Quickwash 30'	30	6.0	73	0.30	0:30
Jeans	40	7.0	95	0.85	2:21
Lingerie	30	2.0	45	0.35	0:36
Steam Auto Clean	—	—	11	0.50	0:35
Steam Refresh	—	1.0	0.5	0.20	0:10

Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

* The time indicated on the display can deviate from the values in the table, because it takes into account the operating conditions applicable at that time.

** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

*** Reference Programme for Energy Label (with separator in detergent dispenser removed for use of powder detergent).

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use (remove separator in detergent dispenser for use of powder detergent if necessary).

1. Push the **"On/Off"** button ⏻ . Wait until the light loop around the programme buttons has finished and only one programme button lights up. The **"Start (Pause)"** button light blinks.
2. Select the **desired programme** by touching the corresponding programme button; it is marked by a blue light. Or select a "special programme" by touching the "Special programmes" button on the display until the symbol of the desired programme lights up.
3. The **temperature** and **spin speed** indicated on the display can be altered by touching the "Temperature" button or the "Variable spin" button.

SELECT ANY DESIRED OPTION

If a combination of programme and/or options is not possible, the option light shortly blinks and and switches off again, and a signal sounds.

"Intensive rinse" button
- More water is added and rinse cycle is prolonged.
- Particularly suitable for areas with very soft water or for washing baby linen and helping people with allergies.

"Easy ironing" button
- Reduces creasing by an increased water quantity and a very gentle spin.

"Eco" button
- With a modified temperature profile and a slightly prolonged washing duration, the optimum combination of excellent washing result and even lower energy consumption is achieved.

"Prewash" button
- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

"Steam Stain Removal" button Stain removal
- Treats the laundry with hot steam during the wash cycle in order to help removing stains.
- Selectable for laundry made of cotton and/or synthetics within temperature range of 40 to 60°C.

"Steam Sanitization" button Sanitization
- Eliminates bacteria and helps sanitizing the laundry.
- Appropriate for cotton and/or synthetic laundry items with care label within temperature range of 40 to 60°C and up to a maximum load of 6 kg.
- Prolongs the programme by approx. half an hour to an hour, depending on the load size.

"Variable spin" button (incl. "Rinse hold")
- Every programme has a predefined spin speed.
- Touch the button to set another spin speed.
- If you select spin speed "0", the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.
- If you select "Rinse hold", the laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
  - Select "Rinse hold" if you want to postpone spinning to a later time or if you want to drain only.
  - Do not leave the laundry to soak in the rinse hold for too long.
  - The programme stops to "Rinse hold", when the "Rinse hold" symbol on the display blinks; the **"Start (Pause)"** button blinks as well.
  - To terminate the "Rinse hold" by draining the water, without any spinning, touch the **"Start (Pause)"** button.
  - To terminate the programme by spinning the laundry, touch the "Variable spin" button to select the desired spin speed and then the **"Start (Pause)"** button to start the spin cycle.

SAVE YOUR FAVOURITE PROGRAMMES

If there is a programme setting which you use frequently, the appliance offers the possibility to save one setting for each programme so that it can be used again by just touching one button.
- Select the desired programme, temperature, spin speed and option(s), touch and hold the **"Favourites"** button for at least 3 seconds. The lamp next to **"Favourites"** shortly blinks and then lights up - the programme setting is saved.

Next time you want to use your individual programme setting, select the programme, shortly touch the **"Favourites"** button and start by touching **"Start (Pause)"**.

If you want to replace the saved programme setting by another one:
- Proceed as already described above - the previously saved programme setting will be replaced by the new one.

START DELAY

The "Start delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper. Do not use liquid detergent when activating the "Start delay".
- Select programme, temperature, spin speed and options.
- Touch the "Start delay" button to select a delay time step between 0:30 and 23:00 hours; a clock symbol appears next to the delay time on the display.
- Touch the **"Start (Pause)"** button; the light stops blinking and becomes constant.
  The countdown of the delay time begins; the clock symbol and the colon between hours and minutes on the display blink.
- The time delay indication disappears when the programme starts and it is replaced by the remaining programme time.
- The number of hours preselected can be changed by touching the "Start delay" button.

To cancel the "Start delay"

..before you touch the "Start (Pause)" button:
- Touch another programme button or set start delay time to "0:00" - the time delay disappears after a few seconds.

..after having touched the "Start (Pause)" button:

Set the delay time to "0:00" - the time delay disappears after a few seconds; or touch **"Start (Pause)"** twice to start the programme immediately.

"ADD GARMENT" INDICATION

Before starting a programme, the symbol lights to show that the door can be opened to add more washing. As soon as you press **"Start (Pause)"**, the door will lock until the end of the programme and must on no account be forced open. In case you have to open it urgently during a running programme, refer to "Reset a running programme before the end".

If you try to start a wash programme and the door is not properly closed, the "Add garment" indication will blink.

PROGRAMME START

Open the tap and touch the **"Start (Pause)"** button; the blinking **"Start (Pause)"** button light becomes constant. The "Add garment" indication goes out, and the lit bubbles indicate that the programme is in process. In some phases, the remaining programme time is newly calculated - if this is the case, the "6th Sense" indication 6th sense on the display will fade, and the remaining programme time is replaced by an animation.

CHILD LOCK

Activating the child lock prevents children from starting a wash cycle or changing the settings of a running programme. To activate the child lock:
- The washing machine has to be switched on ⏻ .
- Touch the "Temperature" and the "Variable spin" buttons simultaneously for a few seconds until the key symbol on the display blinks - the key symbol will light afterwards to show that the child lock is active.

The programme setting cannot be changed anymore; the only change possible is to either reset the running programme by touching and holding "Reset/Drain" for a few seconds, or to switch the washing machine of by pushing **"On/Off"** ⏻ .

To deactivate the child lock, proceed in the same way as for activating it.

RED FAILURE INDICATIONS

If one of the red failure indications on the display lights up, refer to the "Troubleshooting Guide" in your "Instructions for Use".

PROGRAMME END

- The display shows "End", and the "Programme finished" indication lights up.

1. Switch the machine off by pushing **"On/Off"** ⏻ .
2. Close the water tap.
3. Open the door and unload the machine.
4. Leave the door ajar to allow the drum to dry.

- If you do not switch the washer off, the display lights go out automatically after a few minutes to save energy; only "End" will remain visible on the display.

DETERGENT OVERDOSAGE INDICATION

The symbol will blink at the end of the programme if you used too much detergent. Use less detergent next time.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Touch the **"Start (Pause)"** button to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Touch the **"Start (Pause)"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

RESET A RUNNING PROGRAMME BEFORE THE END

The **"Reset/Drain"** button cancels a programme before the end. Touch and hold the **"Reset/Drain"** button for at least 3 seconds; the bubbles light in the programme sequence indicator goes out, and the remaining time on the display is replaced by an animation. Any existing water is drained out before the door can be opened. Caution! The washing might still be hot.

Whirlpool is a registered trademark of Whirlpool USA